


DIESEL JT REAR LEFT WHEEL WELL STUD CUT FOR 3.3 & 3.5 SERIES SHOCKS ONLY

www.falconshocks.com

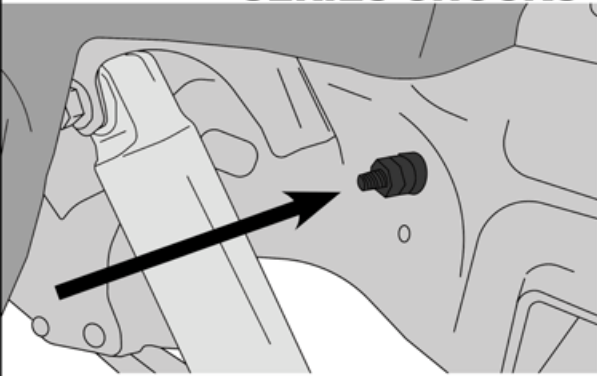

STEPS:


- REMOVE NUT FROM STUD
- CAREFULLY GRIND/CUT OFF STUD FLUSH TO FRAME
- PAINT OVER BARE METAL WITH RUST PREVENTATIVE

TOOLS NEEDED:

- GENERAL MECHANICS TOOLS
- SAFETY EQUIPMENT
- CUTTING TOOL (ANGLE GRINDER, HACKZALL OR EQUIVALENT)


NOTE: STUD INTERFERES WITH CONTROL DIAL IF NOT REMOVED

REVISION A 96-08-01-018



DIESEL JT REAR LEFT WHEEL WELL STUD CUT FOR 3.3 & 3.5 SERIES SHOCKS ONLY

www.falconshocks.com

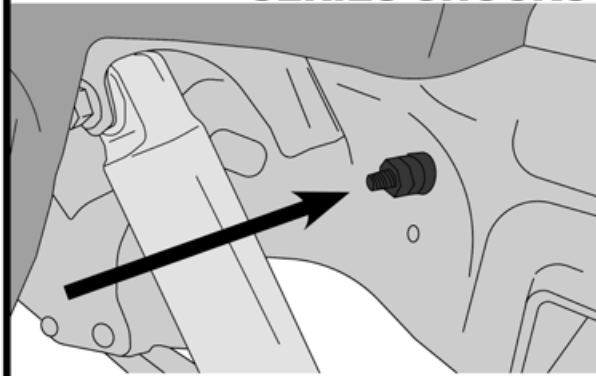

STEPS:


- REMOVE NUT FROM STUD
- CAREFULLY GRIND/CUT OFF STUD FLUSH TO FRAME
- PAINT OVER BARE METAL WITH RUST PREVENTATIVE

TOOLS NEEDED:

- GENERAL MECHANICS TOOLS
- SAFETY EQUIPMENT
- CUTTING TOOL (ANGLE GRINDER, HACKZALL OR EQUIVALENT)


NOTE: STUD INTERFERES WITH CONTROL DIAL IF NOT REMOVED

REVISION A 96-08-01-018



DIESEL JT REAR LEFT WHEEL WELL STUD CUT FOR 3.3 & 3.5 SERIES SHOCKS ONLY

www.falconshocks.com

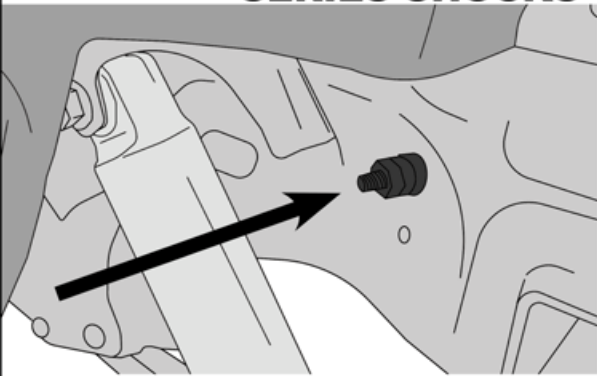

STEPS:


- REMOVE NUT FROM STUD
- CAREFULLY GRIND/CUT OFF STUD FLUSH TO FRAME
- PAINT OVER BARE METAL WITH RUST PREVENTATIVE

TOOLS NEEDED:

- GENERAL MECHANICS TOOLS
- SAFETY EQUIPMENT
- CUTTING TOOL (ANGLE GRINDER, HACKZALL OR EQUIVALENT)


NOTE: STUD INTERFERES WITH CONTROL DIAL IF NOT REMOVED

REVISION A 96-08-01-018



DIESEL JT REAR LEFT WHEEL WELL STUD CUT FOR 3.3 & 3.5 SERIES SHOCKS ONLY

www.falconshocks.com

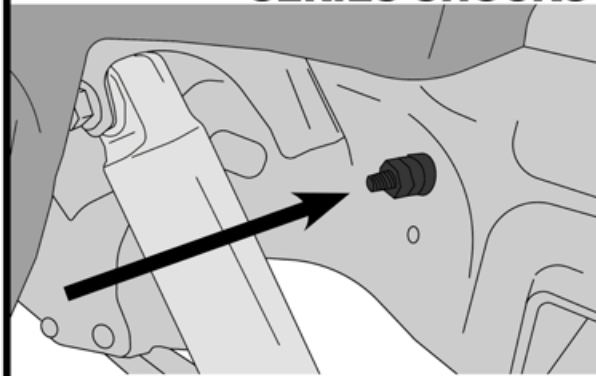

STEPS:

- REMOVE NUT FROM STUD
- CAREFULLY GRIND/CUT OFF STUD FLUSH TO FRAME
- PAINT OVER BARE METAL WITH RUST PREVENTATIVE

TOOLS NEEDED:

- GENERAL MECHANICS TOOLS
- SAFETY EQUIPMENT
- CUTTING TOOL (ANGLE GRINDER, HACKZALL OR EQUIVALENT)

NOTE: STUD INTERFERES WITH CONTROL DIAL IF NOT REMOVED

REVISION A 96-08-01-018